TIPPMANN

TRIUMPH XL BY TIPPMANN

BASIC PARTS LIST

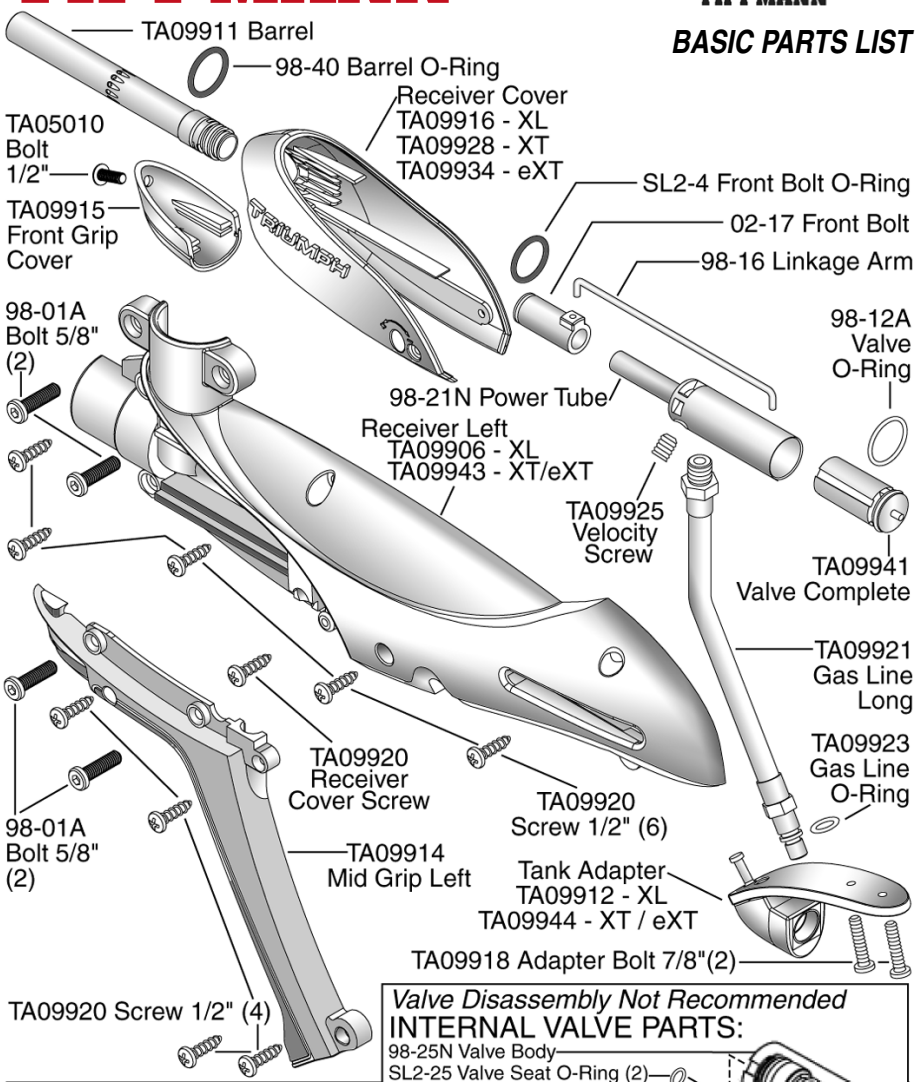

Valve Disassembly Not Recommended

INTERNAL VALVE PARTS:

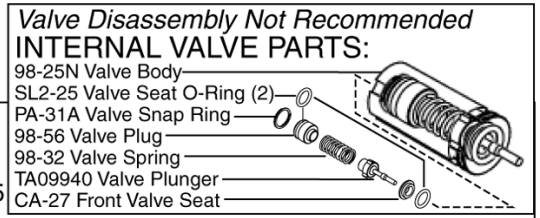

TRIGGER ASSEMBLY

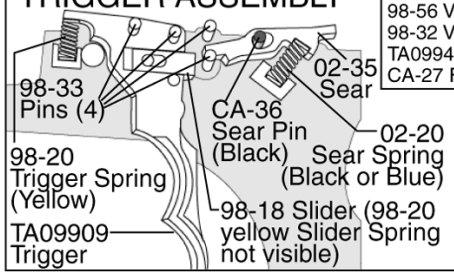

1) Place 4 dowel pins and 1 black sear pin into locations as shown.
2) Then place the trigger and sear onto pins as shown.
3) Insert sear spring (black or blue) as shown.
4) Insert trigger spring (yellow) as shown.

⚠ WARNING

DO NOT DISASSEMBLE THIS MARKER WHILE IT IS PRESSURIZED WITH AIR. DO NOT PRESSURIZE A PARTIALLY ASSEMBLED MARKER.

TRIUMPH BY TIPPMANN

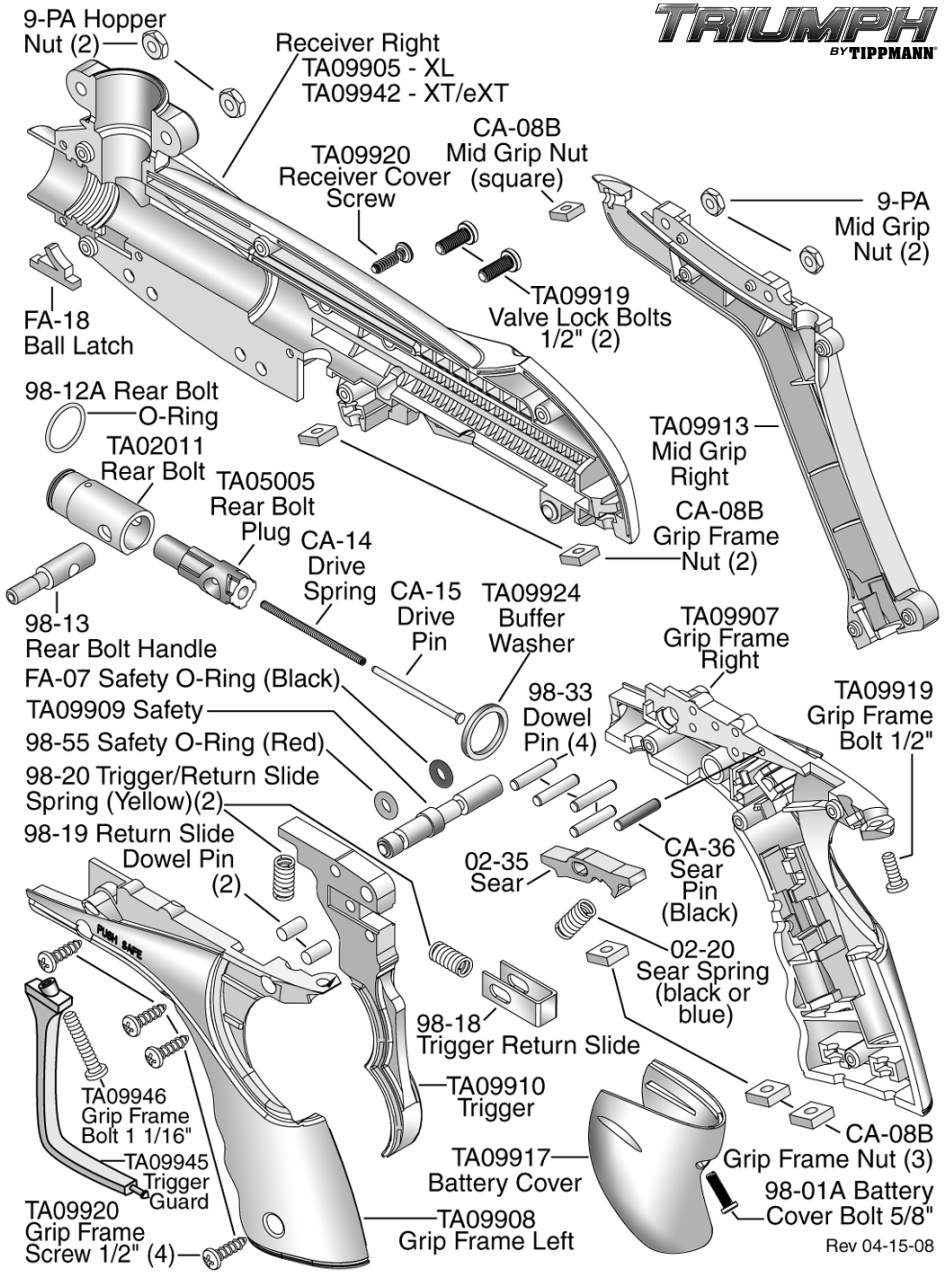

Rev 04-15-08